


GOLIAT RING BASE ST

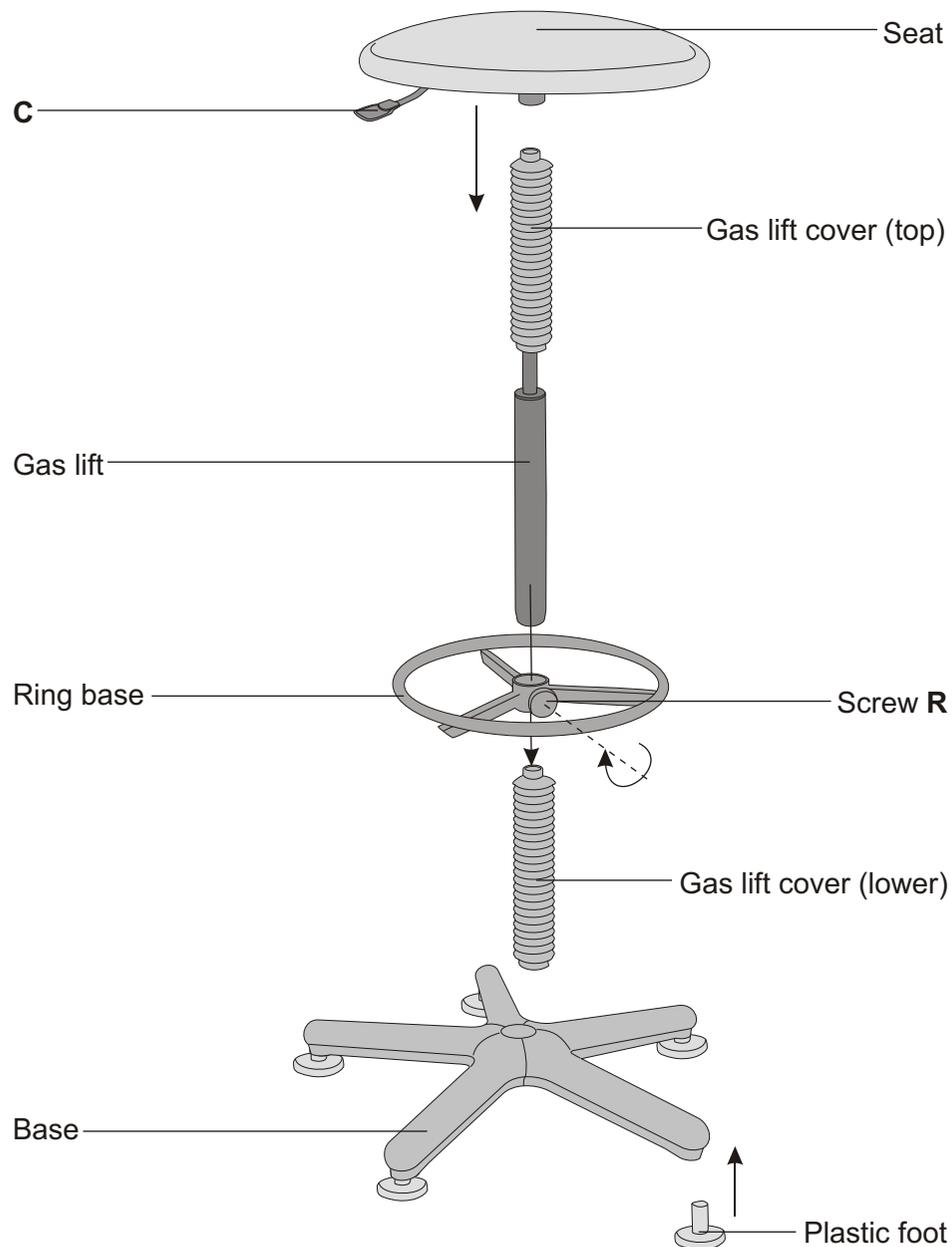

ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, please check that all parts are enclosed.

PART LIST

- | | |
|--------------------------|-------------------------------|
| <input type="checkbox"/> | 1 base |
| <input type="checkbox"/> | 5 plastic foot |
| <input type="checkbox"/> | 1 gas lift |
| <input type="checkbox"/> | 1 gas lift cover (lower part) |
| <input type="checkbox"/> | 1 ring base with screw |
| <input type="checkbox"/> | 1 gas lift cover (top part) |
| <input type="checkbox"/> | 1 seat |

ASSEMBLY

1. Insert plastic feet into base.
2. Insert gas lift into base.
3. Slide over the gas lift cover one after another gas lift cover (lower part), ring base, gas lift cover (top part) and fix the ring base with screw R.
4. Firmly locate the tapered end of the gas lift into locating hole in the seat.

ADJUSTMENT

- The Seat height adjustment - lever **C**.

Gas lift allows the adjustment of the seat height.

- The ring base height adjustment - screw **R**.

By releasing screw **R** the ring base can be moved up and down. Place the ring base at desired position and retighten screw **R**.

MAINTENANCE

Inspection Inspect chair at least every six months to make sure all knobs, bolts and screws are tight.

Vinyl upholstery Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.

Fabric upholstery Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.

Other surfaces Wipe with a soft cloth, moistened in a mild detergent solution. Dry and buff lightly with a dry cloth.

Attention

Exchange and installation of gas-lifts should only be carried out by trained specialists.