


# SENIOR GTS RING BASE ST

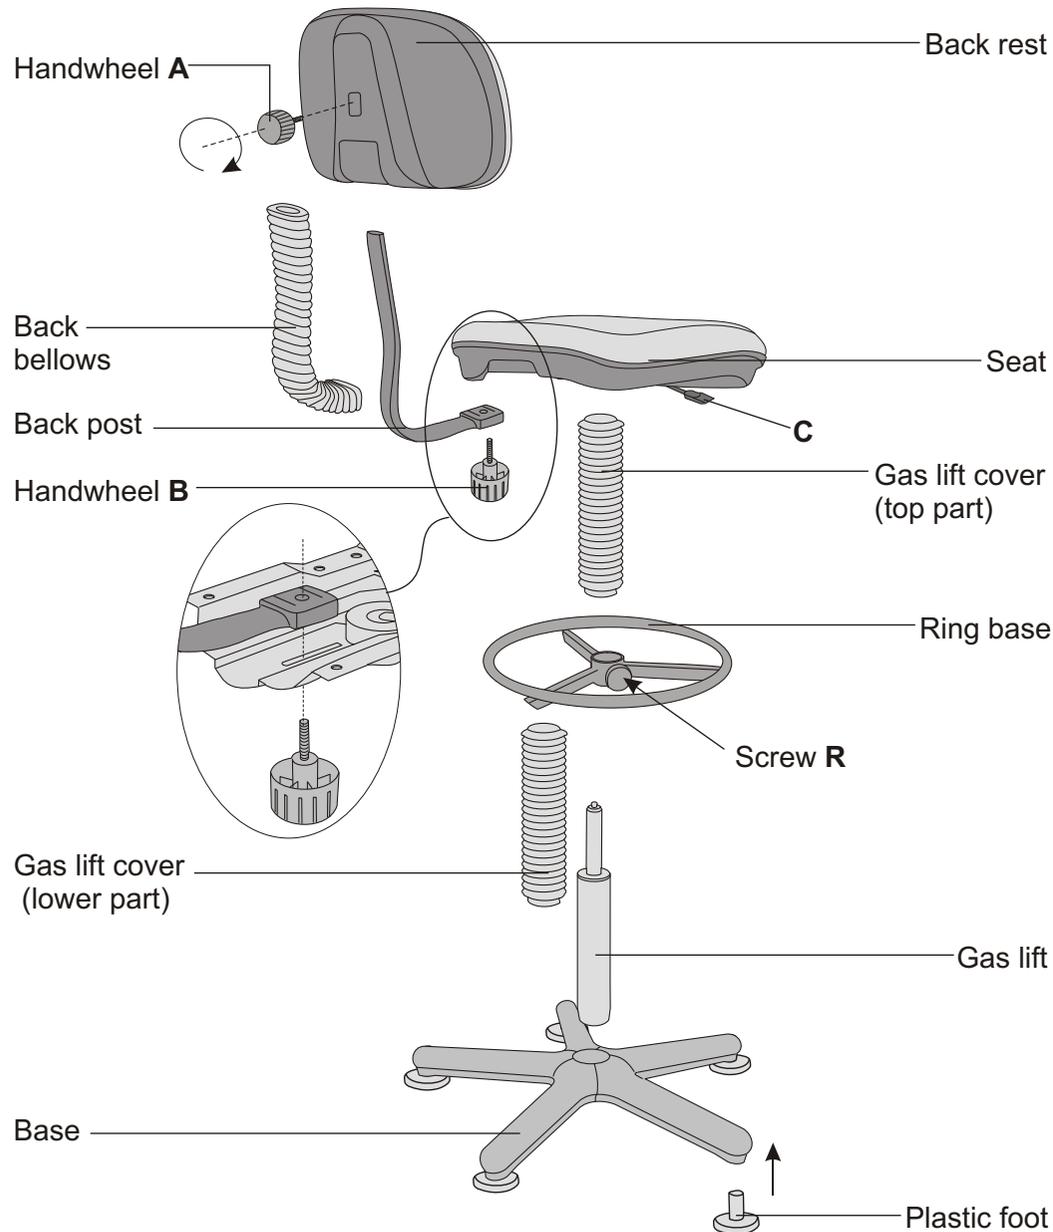

## ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, check to see that all parts are enclosed.

### PART LIST

1 base	1 seat
5 plastic foot	1 back post
1 gas lift	1 back bellows
1 gas lift cover (lower part)	1 back rest
1 ring base with screw	1 handwheel A (short)
1 gas lift cover (top part)	1 handwheel B (long)

### ASSEMBLY

1. Insert plastic foot into base.
2. Insert gas lift into base.
3. Slide over the gas lift cover one after another gas lift cover (lower part), ring base, gas lift cover (top part) and fix the ring base with screw **R**.
4. Firmly locate the tapered end of the gas lift into locating hole in a seat.
5. Insert back post into seat hole and tighten handwheel **B**.
6. Slide back bellows over back post.
7. Put back rest upon the back post and tighten handwheel **A**.

### ADJUSTMENT

- The Seat height adjustment - lever **C**.  
Gas lift allows the adjustment of the seat height.
- The back height adjustment - handwheel **A**.  
By releasing handwheel **A** the back can be moved up and down. Place the back at desired position and retighten handwheel **A**.
- The back depth adjustment - handwheel **B**.  
By releasing handwheel **B** the back can be moved forward and back. Place the back at desired depth and retighten handwheel **B**.
- The ring base height adjustment - screw **R**.  
By releasing screw **R** the ring base can be moved up and down. Place the ring base at desired position and retighten screw **R**.

### MAINTENANCE

**Inspection** Inspect chair at least every six months, to make sure all knobs, bolts and screws are tight.

**Upholstery** Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.

**Fabric upholstery** Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.

**Other surfaces** Wipe with a soft cloth, moistened in a mild detergent solution. Dry and buff lightly with a dry cloth.

#### Attention

Exchange and installation of gas-lifts should only be carried out by trained specialists.