
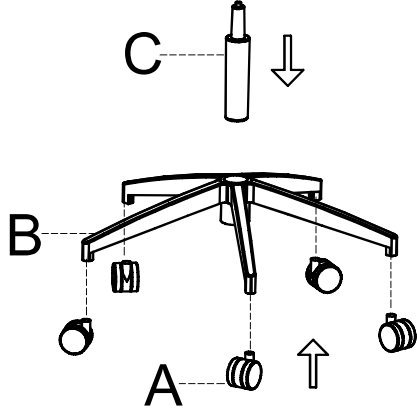

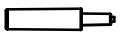












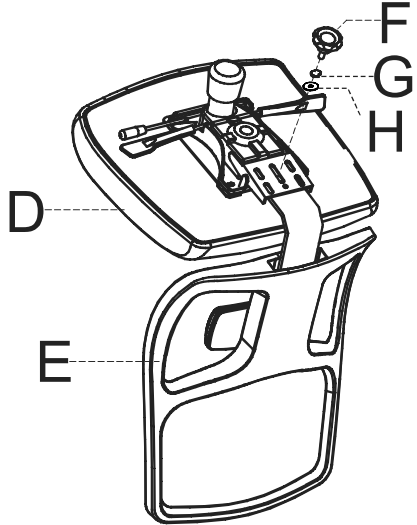
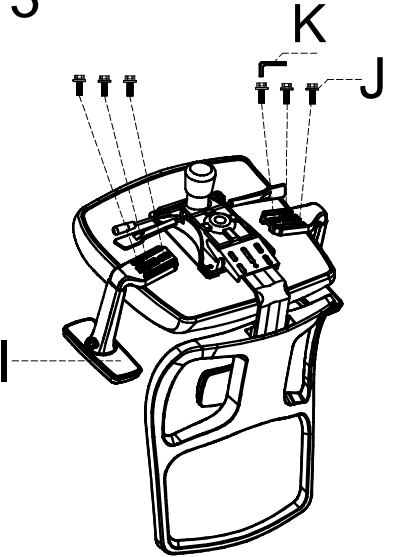
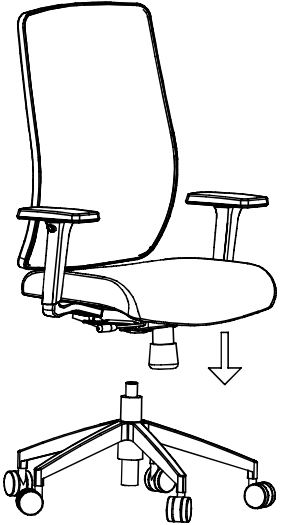
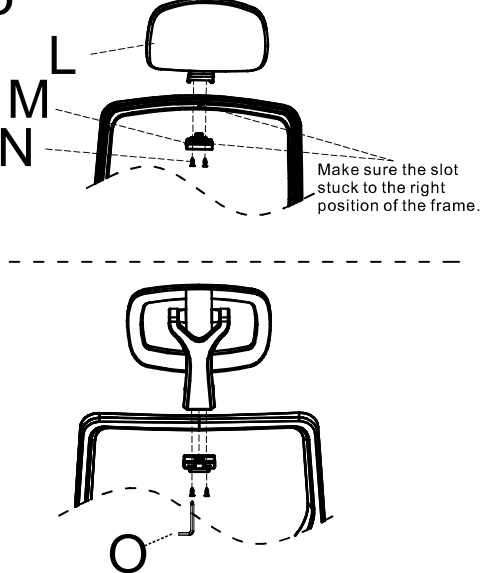



Part	Picture	Qty.	Spare	
A		5		<p>1</p> 
B		1		
C		1		
D		1		
E		1		
F		1		
G		1		
H		1		
I		2		
J	 M6x30	6	1	
K		1		
L		1		
M		1		
N		2		
O		1		
				<p>2</p> 
				<p>3</p> 
				<p>4</p> 
				<p>5</p> 
				<p>6</p> 

Headrest adjustment (①):

To rise: Hold the headrest with both hands and lift it up to a suitable height.

To lower: Hold the headrest with both hands and pull it down to a suitable height.

To adjust the angle: Hold and turn the headrest to proper position.

Back height adjustment (②):

To change the back height (②), lift up the back by putting your force at the bottom of the back, then adjust the back height step by step.

Only the back reach the highest position, then can pull down the back to the first position (lowest position).

Lumbar support adjustment (③):

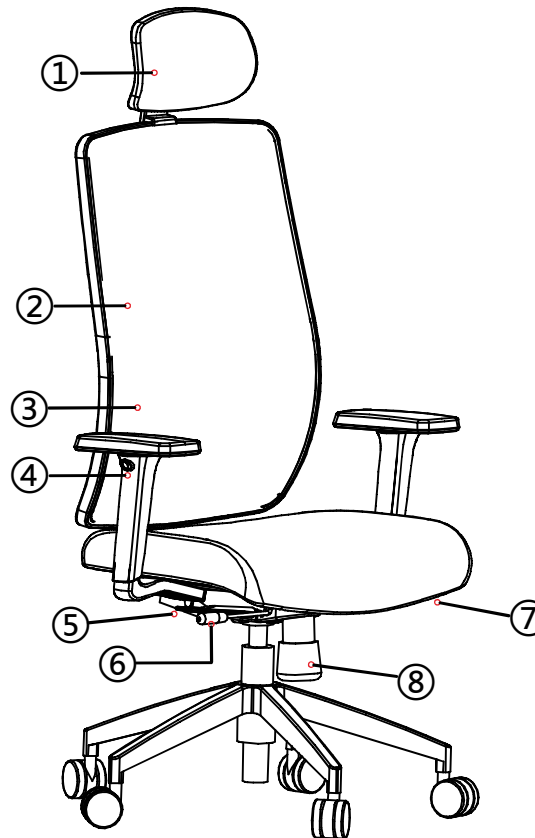
Hold the lumbar support (③) and move up or down.

Armrest adjustment (④):

To rise up or lower down the armrest, hold and press the button on the armrest, move up or down to proper position.

To move the arm top position, push the top forward or pull backward.

To move the arm top left and right position, push the top to leftside or rightside.



Seat height adjustment (⑤):

To raise the seat height, remove weight from the seat and

pull up on the height adjustment lever (⑤), release the lever when reaching the desired position.

To lower the seat height, while seated, pull up slowly on the height adjustment lever until the seat is at the desired height.

Seat depth adjustment (⑥):

To enlarge the seat depth, pull up the slider lever (⑥) and move forward to desired position, then release the lever.

To go back to the first position, pull up the slider lever and remove body weight from the seat.

Backrest angle adjustment (Tilt/Swing Lock) (⑦):

To change backrest's position, push forward the adjustment

lever (⑦), then lie backwards the backrest to desired position, and pull back the adjustment lever to lock.

To go back to the first position, push forward the adjustment lever, lie backwards again and then backrest will return automatically.

Tilt tension adjustment (⑧):

To adjust the seat tilt tension, turn the tension adjustment

knob (⑧) on the mechanism to desired tension, turn clockwise or anticlockwise.

Clockwise to stronger and anticlockwise to weaker.