

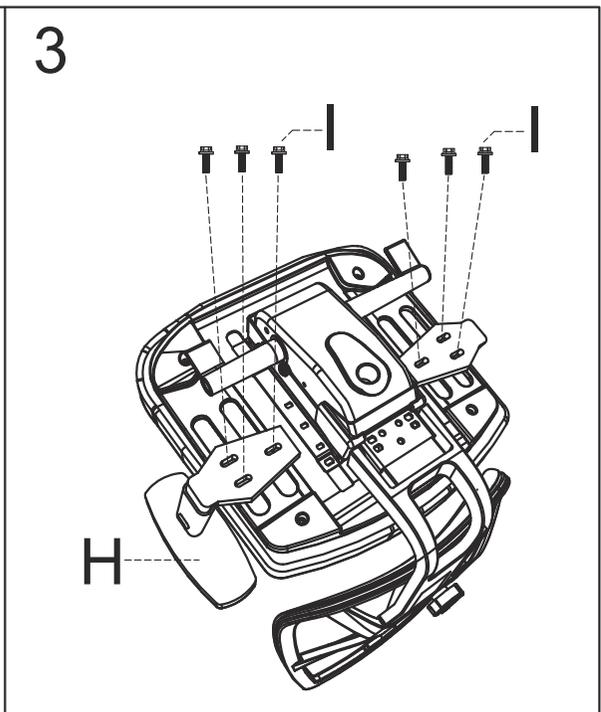


Part	Picture	Qty.
A		5
B		1
C		1
D		1
E		1
F	 M8x45	3
G		1
H		2
I	 M6x35	6

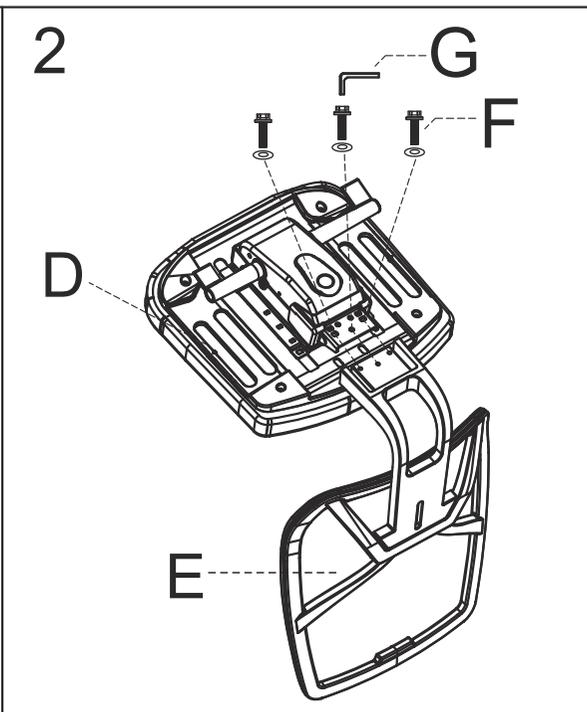


K113724  
K199842

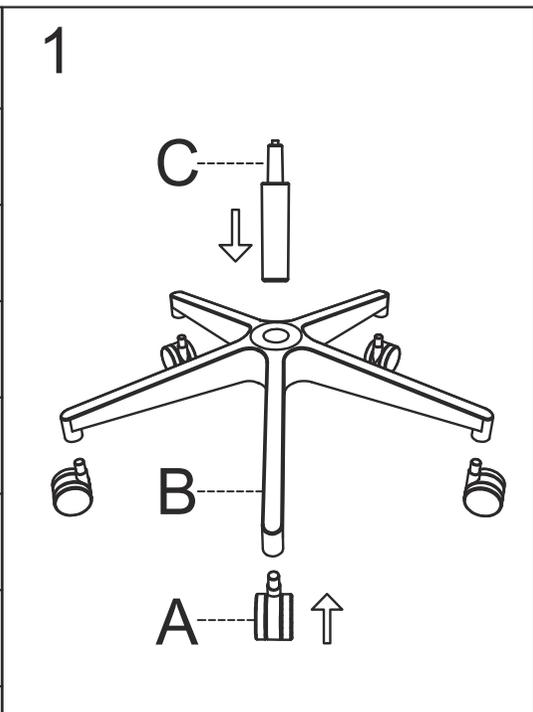


### Lumbar support adjustment (①):

Pull up or push down the knob to adjust the height of the lumbar support.  
Turn clockwise or anticlockwise the knob to adjust the lumbar support to desired depth.

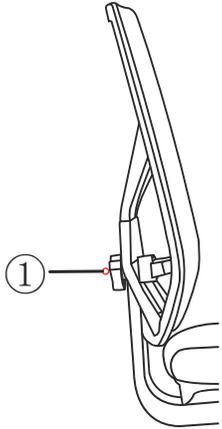

### Armrest adjustment (②):

To rise up or lower down the armrest, while press the button on the armrest and move up or down.

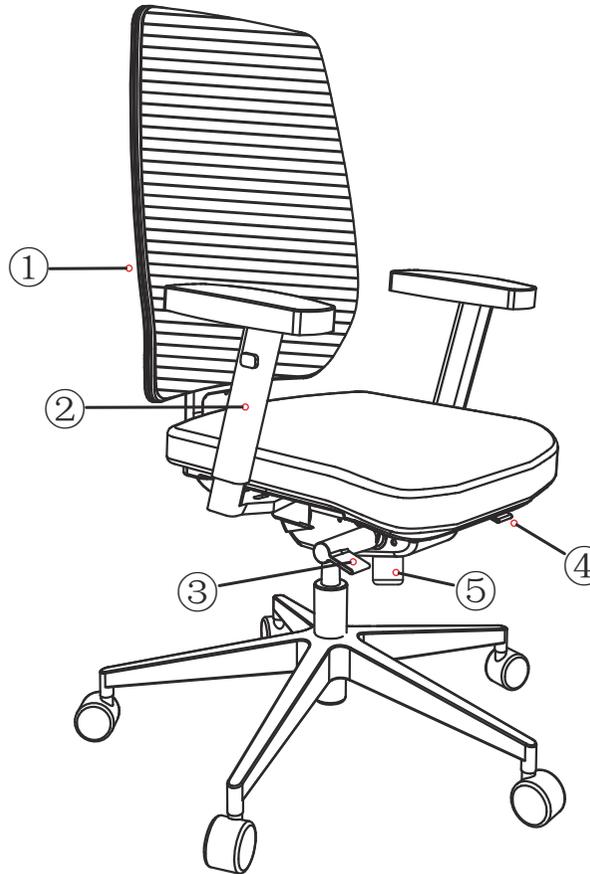

### Seat height adjustment:

To raise the seat height, remove weight from the seat and pull up on the height adjustment lever (③), release the lever when reaching the desired position.  
To lower the seat height, while seated, pull up slowly on the height adjustment lever until the seat is at the desired height.

### Backrest angle adjustment (Tilt Lock):

To change backrest's position, pull up the adjustment lever (④), then lie backwards the backrest to desired position, and push down the adjustment lever to lock.  
To go back to the first position, pull up the adjustment lever, lie backwards again and then backrest will return automatically.

### Tilt tension adjustment:

To adjust the seat tilt tension, turn the tension adjustment knob (⑤) on the mechanism to desired tension, turn clockwise or anticlockwise. Clockwise to make it stronger and anticlockwise to make it weaker.